

# WINTERIZATION

## In Your Pump Room

- Turn Off The Fresh Water Supplies To Splash Pad.
- NEVER Keep The Water Level In The Tank Below Half.
- Find The ¼" Plug Under The Feature Pump & Attach A ¼" Quick Disconnect.

## On Your Splash Pad

- Remove All The In-Ground Spray Nozzles.
- If Applicable, Remove All The Above Ground Features & Prep For Winter Storage.
- Manually Open All The Solenoid Valves.
- Open One Solenoid On The Wall Mount or Landscape Box And Blow Out Line With An Air Compressor With Up To 40 psi.
- Repeat For All Lines And Make Sure To Go Back To Each Valve At Least Twice To Sure That All Lines Are Clear.
- Keep The Valves Open.
- Remove The Clear Check Valve Lids And O-Rings At The Suction Lines By Removing The Screws Securing Them From Falling Into The Tank.
- Allow Suction Lines To The Water Tank To Drain Out Water.
- Install The Blank Winter Nozzles.
- Always Check With All Manufacturer's Specifications.



**SPLASHPADSUSA.COM**

